


DRC1_{v2}

DIGITAL REMOTE CONTROLLER

MUSWAY

Am Breilingsweg 3 · D-76709 Kronau
© Audio Design GmbH, All Rights Reserved
www.musway.de

FUNKTIONSBESCHREIBUNG

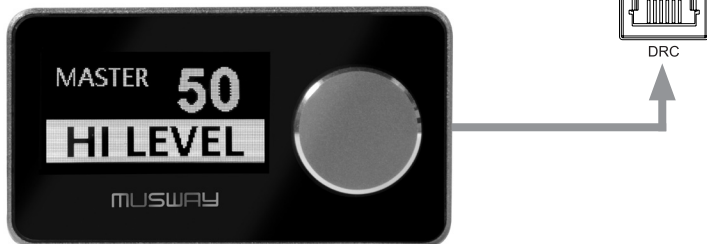

Gesamtlautstärke (Master)

- Am Drehknopf drehen um die Lautstärke zu wählen

Subwoofer-Pegel (Sub)

- Drehknopf drücken
- Am Drehknopf drehen um SUB zu wählen und mit Drücken bestätigen
- Am Drehknopf drehen um den gewünschten Pegel zu wählen

Master-Lautstärkeregler als Subwoofer-Pegelregler festlegen:

- SUB Menü aufrufen
- Drehknopf 5 Sekunden lang gedrückt halten
- Subwoofer auswählen und zur Bestätigung den Drehknopf drücken

Eingangssignal festlegen (Input)

- Drehknopf drücken
- Am Drehknopf drehen um INPUT zu wählen und mit Drücken bestätigen
- Am Drehknopf drehen um die Eingangsquelle wählen

Preset festlegen (Preset)

- Drehknopf drücken
- Am Drehknopf drehen um Preset zu wählen und mit Drücken bestätigen
- Am Drehknopf drehen um das gewünschte Preset zu wählen

Stummschaltung (Mute)

- Ca. 1 Sekunde auf den Drehknopf drücken
- Kurz auf den Drehknopf drücken, um die Stummschaltung zu deaktivieren


DRC1_{v2}

DIGITAL REMOTE CONTROLLER

MUSWAY

Am Breilingsweg 3 · D-76709 Kronau
© Audio Design GmbH, All Rights Reserved
www.musway.de

FUNCTIONAL DESCRIPTION

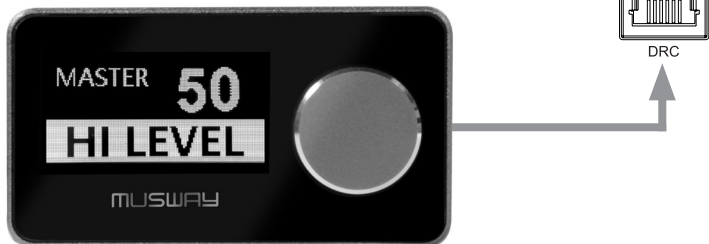

Master Volume (Master)

- Turn the rotary knob to select the volume level

Subwoofer Level (Sub)

- Press the rotary knob
- Turn the rotary knob to select SUB and press to confirm
- Turn the rotary knob to select the desired level

Set Master Volume Knob as Subwoofer Level Knob:

- Enter the SUB menu
- Press and hold the knob for 5 seconds
- Select Subwoofer, then press the knob to confirm

Input source selection (Input)

- Press the rotary knob
- Turn the rotary knob to select INPUT and press to confirm
- Turn the rotary knob to select the desired source

Preset selection (Preset)

- Press the rotary knob
- Turn the rotary knob to select PRESET and press to confirm
- Turn the rotary knob to select the desired preset

Mute function (Mute)

- Press the rotary knob for 1 second
- Briefly press the rotary knob to deactivate the mute function